

# Install QuickTips



## Connecting Beam to AirTouch 5



This guide, will walk you through a detailed set-up of how to connect your **AirTouch Beam** to **AirTouch 5**

### Before Getting Started

*Note: Do not install the AirTouch Beam App on your AirTouch 5 console.*

Please ensure the **AirTouch 5 Main Module** is has been updated to the latest version.

- From the **AirTouch 5 Console** Home Screen press the *Quick Menu* (top right) then locate the *Update* button under *Settings > Options*

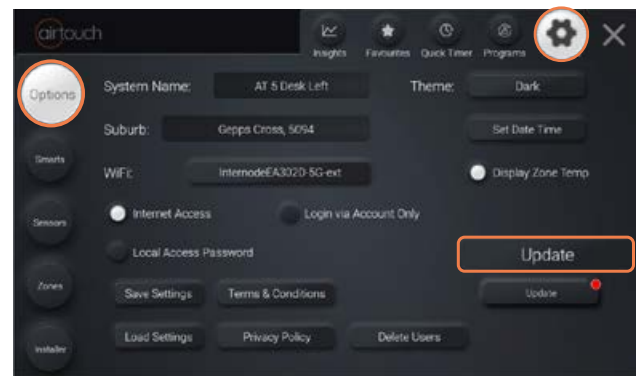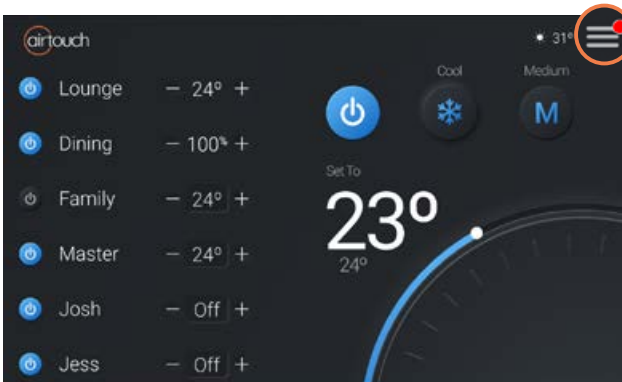


*Note: AirTouch Beam will not function with any AirTouch 5 firmware version below 1.2.2*

### Adding your AirTouch Beam

Set-up AirTouch Beam using the AirTouch Beam App. Ensure that both devices (AirTouch Beam and AirTouch 5) are connected to the same Wi-Fi network.

Download Link:

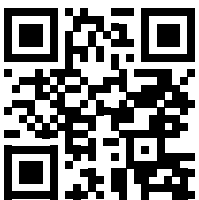

App Tile



iOS Devices:


- Open the Apple App Store
- Search for "AirTouch Beam"
- Tap "Get" to install

Android Devices:


- Open the Google Play Store
- Search for "AirTouch Beam"
- Tap "Install"

## Check your AirTouch 5 Console

Beam will automatically show as an Air Conditioner on the AirTouch 5 interface:

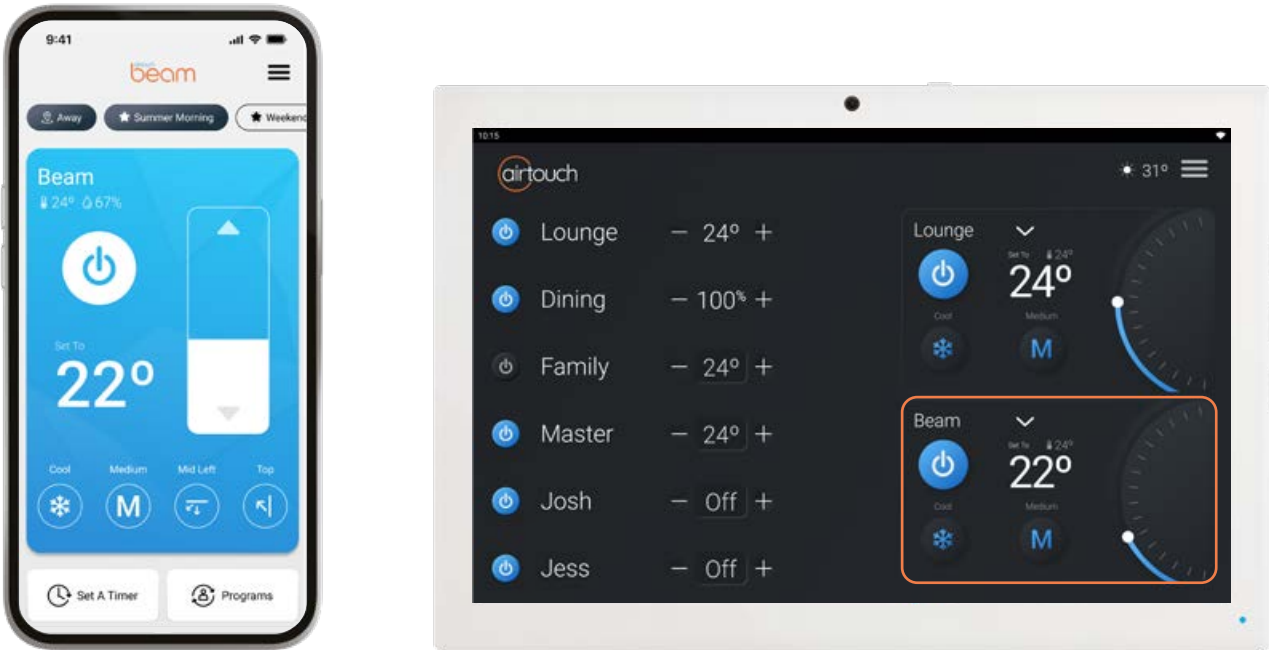

If Beam goes offline or disconnects from the selected Wi-Fi network the AirTouch 5 interface will show, **Error FFFE** on the Beam tile.

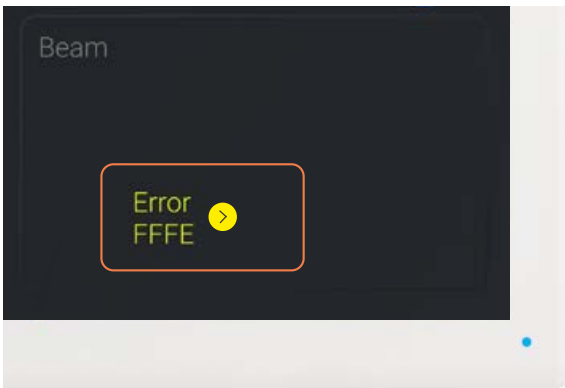

*Note: Beam will automatically re-appear once it has successfully connected back to the internet.*

If the Beam is offline and the user wants to remove it from the AirTouch 5 interface, they just need to restart the AirTouch 5 Console App.

